
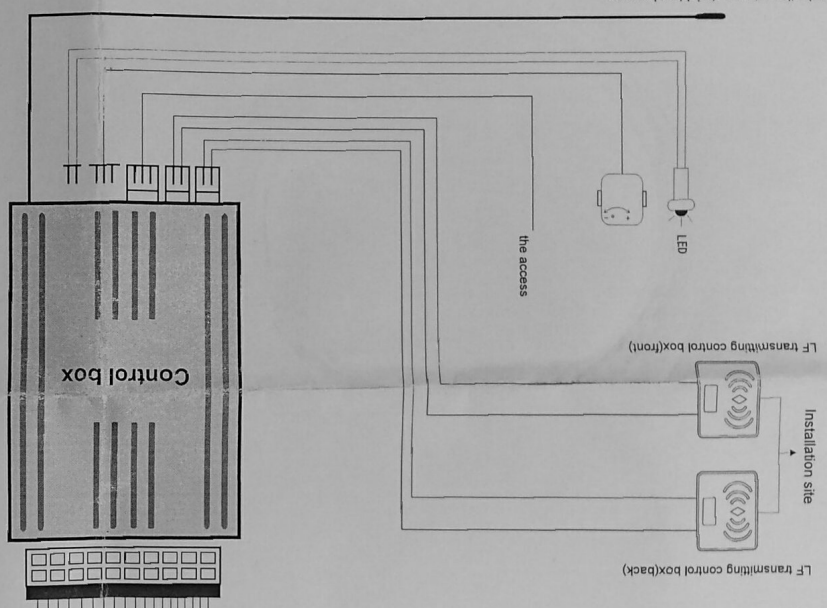


Installation Diagram of PKE III Intelligent Identification (Anti-theft System)

Wiring Diagram


- 1. Contents inspection:**
- 3. LED Alarm Light 1pc.
 - 4. Shocking Sensor 1pc.
 - 5. Wire 1set
 - 6. Alarm Horn 1pc.
 - 7. Instruction Manual 1pc.
 - 8. Installation Diagram 1pc.
 - 9. Low Frequency Launching Box 2pcs.
- 2. Check before installation:**
1. Check if the engine starts normally or not
 2. Check if the direction indicator lights are working normally or not
 3. Check if the horn sounds normally or not
 4. Check if the side door light is working normally or not
 5. Check if the switch of the side doors is working normally or not
 6. Check if the central lock system is working normally or not

- 3. Check the following before installation**
- Check the alarm system if it matches the car:
- 1. Models for installation:
 - electrical knife, electro probe
 - disconnection clamp, cross screwdriver(pillips), electrical tape
- Check the indicator lights if it works or not, test the control of indicator lights if it flashes or not and the left flash at the same time
- Check the footbrake electronic circuit if it works or not.
- Check the switch of side door if it works or not
- Shift the dome light in the car to "DOOR": the dome light will be opened when the door. After all the doors are closed, within 20 seconds, it will automatically turned off.





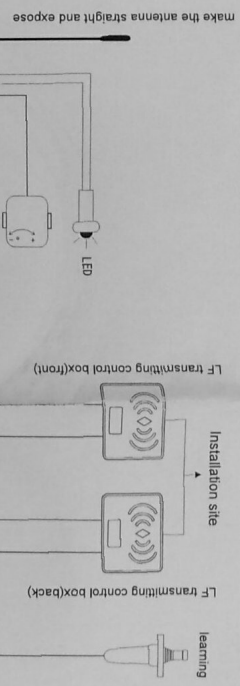


Instruction of car alarm system plug and wire:

20	Unlock NO	ACC
19	Unlock COM	
18	Unlock NC	
8	Output wire of circuit breaker (-)	
17	Lock NO	Horn
6	Lock COM	Footbrake
5	Lock NC	Negative trigger of electric window
14	Battery 12V	Side door (-)
13	Indicator light	Side door (+)
12	Indicator light	GND (-)
11	Trunk	Learning Key
10		

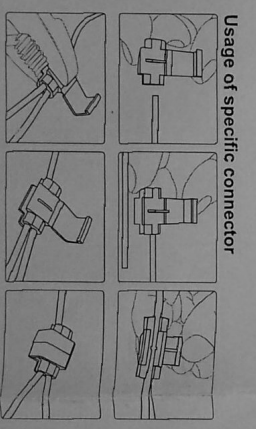

Wiring Diagram of Central Control Lock

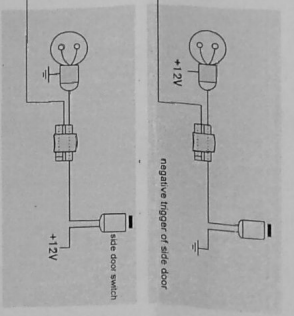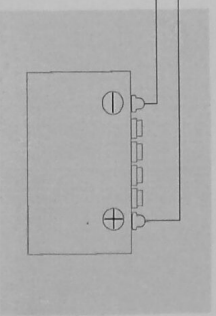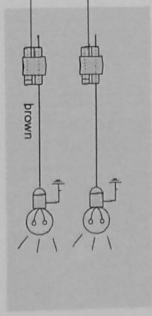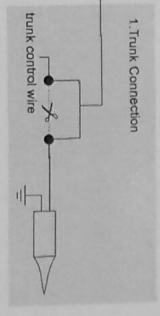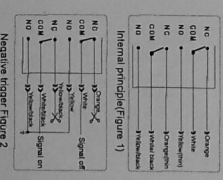

(used on the cars with negative signal direct control)

